


1. REMOTE DEVICE
2. DO NOT USE AUTOMATIC RESET MODE IN APPLICATIONS WHERE UNEXPECTED AUTOMATIC RESTART OF THE MOTOR CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.
ALL A1 AND A2 TERMINALS ARE INTERNALLY CONNECTED.

REFER TO E300 USER MANUAL CHAPTER 5 FOR OPERATION.
TO ENERGIZE THE STARTER VIA THE NETWORK, SET NETWORK TAG LogicDefinedP00Data to 1.

DEVICELOGIX CONFIGURATION:
E300 PARAMETER 184 (ConfigPreset) SET TO NoNonRev2Wire ~ OPERATING MODE 3 ~ (NON-REVERSING STARTER ~ NETWORK)
3. APPROXIMATELY 1 TWIST PER INCH.
4. E300 CONTROL MODULE FIRMWARE TO BE 5.000 OR GREATER TO ENABLE DEVICELOGIX.
5. RESET BUTTON (IN5)
E300 PARAMETER 201 SET TO 1 ~ (TRIPRESET) OR LOGIX TAG ~ C.INPT05ASSIGNMENT SET TO 1
6. UNIT SHORT CIRCUIT CURRENT RATING CAN BE FOUND ON THE ONE-LINE (WHERE APPLICABLE) OR ON THE UNIT NAMEPLATE.
7. FOR ETHERNET LINEUPS, ETHERNET CABLE CONNECTED TO ADAPTER IN WIREWAY OR DIRECTLY TO SWITCH. FOR ALL OTHER ORDERS, NO CONNECTION IS MADE BY FACTORY.
8. FOR ETHERNET LINEUPS, 24V DC WIRED TO MAG IN WYMY OR TO TERMINAL BLOCKS IN HWMY FOR FRAME MOUNT UNITS. FOR NON-ETHERNET ORDERS, 24V DC MUST BE PROVIDED BY CUSTOMER. FOR UNIT ORDERS ONLY, 1M OF 24V DC WIRE SHOULD SHIP WITH THIS ORDER.

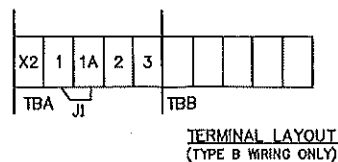

T1	T2	T3
TBD		

CUSTOMER WIRING TORQUE SPECS (±10%)	
Load Cable Connection at Overload	22 lb-in(2.5 Nm)
Load Cable Connection at Power Terminal Block	30 lb-in(3.4 Nm)
Starter Auxiliary Contacts	12 lb-in(1.3 Nm)
C.B. Internal Device TB and External Auxiliary Contacts	7 lb-in(0.8 Nm)
Overload Control Terminals	5 lb-in(0.6 Nm)
Control Terminal Blocks	12 lb-in(1.3 Nm)

[illegible]

PROJECT:
CUSTOMER:
ORDER--LINE NUMBER:
LANG: ENG

Rockwell Automation	
2113 SIZE 1 FVNR	
DRAWN BY: CTO	DATE: 11-JUN-20

CONFIDENTIAL AND PROPRIETARY INFORMATION.
THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY
INFORMATION OF ROCKWELL AUTOMATION, INC. AND MAY
NOT BE USED, COPIED OR DISCLOSED TO OTHERS EXCEPT
WITH THE AUTHORIZED WRITTEN PERMISSION OF
ROCKWELL AUTOMATION INC.

SHEET 1 OF 1	
SIZE D	10005620610